

TH-103 DMX CHANNEL CHART

CHANNEL	FUNCTION	VALUES	FUNCTIONS
CH1	Horizontal Scanner	000-255	PAN from 00-54 or 630 degree scanner
CH2	Vertical scanner	000-255	TILT from 0-280 degree scanner
CH3	Zoom	000-255	Zoom scanner
CH4	Strobe/Reset	000-009	no strobe (light on)
		010-059	Strobe from slow to fast
		060-064	no strobe (light on)
		065-114	Random strobe from slow to fast
		115-119	no strobe (light on)
		120-169	From slow to fast strobe bright gradually
		170-174	no strobe (light on)
		175-224	from slow to fast strobe dark gradually
		225-234	no strobe (light on)
		235-244	no strobe, light off, after 3sec, reset unit
		245-255	no strobe (light on)
CH5	Macro	000-002	R
		003-004	RW
		005-007	RG
		008-009	RGW
		010-012	G
		013-014	GW
		015-017	GB
		018-019	GBW
		020-022	B
		023-024	BW
		025-027	RB
		028-029	RBW
		030-039	W
		040-049	RGBW
		050-083	R on, G on gradually, B off
		084-117	R off gradually, G on, B off
		118-151	R off, G on, B on gradually
		152-185	R off, G off gradually, B on
		186-218	R on gradually, G off, B on
		219-252	R on, G off, B off gradually
253-255	RGBW		
CH6	Total Dimmer	000-255	0%-100% dimmer
CH7	Red	000-256	0%-100% dimmer
CH8	Green	000-257	0%-100% dimmer
CH9	Blue	000-258	0%-100% dimmer
CH10	White	000-259	0%-100% dimmer
CH11	Color changing automatic	000-005	RGBW, color decided by CH5
		006-127	Color gradual changing from slow to fast
		128-255	Color jumping from slow to fast
CH12	Horizontal fine	000-255	
CH13	Vertical fine	000-255	
CH14	Scanner speed	000-255	from fast to slow scanner
CH15	Run mode	000-049	DMX mode
		050-099	Pan auto
		100-149	Tilt auto
		150-199	Pan/Tilt auto
200-255	Sound		