

Channel List:

16CH MODE

Channel	Value	Control function
1	0-255	Main dimming ON
2	0-255	Red
3	0-255	Green
4	0-255	Blue
5	0-255	White
6	0-255	User customs color
7	0-255	Pan
8	0-255	Tilt
9	0-255	Pan fine (16Bit)
10	0-255	Tilt fine (16Bit)
11	0-255	XY motor speed from quick to slow
12	0-255	F motor
13	0	No strobe
	1-255	Strobe from slow to quick
14	0	No marco funtion
	1~25	Start controller handspike
	26-50	Turn off controller handspike
	51-90	Program color selection switch
	91-130	Pulse change
	131-170	Jump change
	171-210	fade
	211-250	Inside mode 1 (can't be controlled)
251-255	Sound mode (can't be controlled)	
15	0-255	pulse, jump, fade from slow to quick (CH14 is 91-210 之间)
	0	Can't use color selection function
	1~20	R255 G↑ B0 W0
	21~40	R↓ G255 B0 W0
	41~60	R0 G255 B↑ W0
	61~80	R0 G↓ B255 W0
	81~100	R↑ G0 B255 W0
	101~120	R255 G0 B↓ W0
	121~140	R255 G↑ B↑ W0
	141~160	R↓ G↓ B255 W0
	161~170	R255 G255 B255 W255
	171~200	R0 G0 B0 W0
	201~205	R242 G204 B5 W227
	206~210	R242 G215 B5 W227
	211~215	R255 G255 B50 W255
	216~220	R255 G255 B90 W255
	221~225	R255 G255 B118 W255
	226~230	R255 G255 B132 W255
	231~235	R255 G255 B151 W255
	236~240	R255 G255 B171 W255
241~245	R255 G255 B185 W255	

	246-250	R255 G255 B197 W255
	251-255	R255 G255 B234 W255
16	0-9	IDcode fail
	10-19	ID1
	20-29	ID2
	30-39	ID3
	40-49	ID4
	50-59	ID5
	60-69	ID6
	70-79	ID7
	80-89	ID8
	90-99	ID9
	100-109	ID10
	110-119	ID11
	120-129	ID12
	130-139	ID13
	140-149	ID14
	150-159	ID15
	160-169	ID16
	170-179	ID17
	180-189	ID18
	190-199	ID19
	200-209	ID20
	210-219	ID21
	220-229	ID22
	230-239	ID23
	240-249	ID24
250-255	ID25	

12CH MODE

Channel	Value	Control function
1	0-255	Main dimming
2	0-255	Red
3	0-255	Green
4	0-255	Blue
5	0-255	White
6	0-255	User customs color
7	0-255	Pan
8	0-255	Tilt
9	0-255	Pan fine (16Bit)
10	0-255	Tilt fine (16Bit)
11	0-255	XYmotor speed from quick to slow
12	0-255	F motor