

DMX Channel Assignments and Values

7-CH	Channel	Function	Value	Setting
	1	Red	000 255	0~100%
	2	Green	000 255	0~100%
	3	Blue	000 255	0~100%
	4	Color Macros (overrides CH. 1-3)	000 015	No function
			016 255	Color Macros
	5	Speed (when CH.6 is 032~223)	000 255	0~100%
		Strobe	000 015	No function
			016 255	Slow to fast
	6	Mode	000 031	RGB Mode
			032 063	Pulse effect 0~100%
			064 095	Pulse effect 100%~0
			096 127	Pulse effect 100%~0~100%
			128 159	Auto fade transition
			160 191	Auto snap transition (3 colors)
			192 223	Auto snap transition (7 colors)
			224 255	Sound-Active mode
	7	Dimmer	000 255	0~100%

3-CH	Channel	Function	Value	Setting
	1	Red	000 255	0~100%
	2	Green	000 255	0~100%
	3	Blue	000 255	0~100%

5. TECHNICAL INFORMATION

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and mechanical wear. To maintain optimum performance and minimize wear, clean the product at least twice a month. However, usage and environmental conditions contribute to increased cleaning frequency.

To clean the product, follow the instructions below:

- Unplug the product from power.
- Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- Clean all glass/transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- Softly drag any dirt or grime to the outside edge of the glass/transparent surface.
- Gently polish the glass/transparent surfaces until they are free of haze and lint.



Always dry the glass/transparent surfaces carefully after cleaning them.