

Relays



Setup

Feature Address	OS #	Change all names	Change	Settings	Address	Relay
1	1	Relay PC	14.01		1.1.1	4.1.1
2	2	Relay PC	14.01		1.1.15	4.1.2
3	3	Relay PC	14.01		1.1.29	4.1.3
4	4	Relay PC	14.01		1.1.43	4.1.4
5	5	Relay PC	14.01		1.1.57	4.1.5
6	6	Relay PC	14.01		1.1.71	4.1.6
7	7	Relay PC	14.01		1.1.85	4.1.7
8	8	Relay PC	14.01		1.1.99	4.1.8

Devices

Device	OS #	Device Name	Relay	Relay Address	Relay Port	Relay Status
1	1	Relay PC	14.01	1.1.1	4.1.1	Relay with relay

Enter a DMZ Address for Feature 1

7	8	9	-
4	5	6	Full
1	2	3	OK
0			

OK Cancel

Some DMZ addresses are already in use by feature 1.

OK Cancel