

Manual Control



The Manual Control Mode allows you to set-up a look on Betapack 4 without using an external controller.

Select 'Manual' mode using the 'Mode' button. The display will show C.LLL, where C is the channel number and LLL is the level. Select the channel you require or 'A' for all channels, using the 'Up & Down' Arrows and press 'Enter'. Now set the level you require using the 'Up & Down' Arrows and press 'Enter' again to confirm and move back to the channel selection.

The Manual Control levels are reset to zero if power to Betapack 4 is lost.