DMX Address



Status	Description
On	DMX data (start byte of 00) being
	received OK.
Flash Fast	Data being received, but not DMX
	data (start byte of 00)
Flash Slow	DMX data errors occurring.
Off	No DMX data being received