

DMX Fail



Fail Mode	Main Display
Hold Last State	Hold
Fade to Zero	F 00
Fade to Memory 1 - 12	F 01 - F 12
Fade to Sequence 1 - 3	S 01 - S 03

There are four DMX fail modes available – ‘hold DMX’, ‘fade to black’, ‘fade to memory’ and ‘fade to sequence’.

Select ‘DMX Fail’ using the ‘Mode’ button. Using the ‘Up & Down’ Arrows select your preferred choice.

If there is no DMX present, the selected memory/sequence will be recalled immediately.