

Firmware Version



To identify which version of firmware is loaded in Betapack 4, press the 'Up & Down' Arrows until the firmware version is shown in the display (e.g. 02.00) Press and hold the 'Enter' button for 1s, and Betapack 4's CPU serial number will be displayed. Press the 'Enter' button again to return to the version display. Note that the firmware version will also be shown briefly on start up.