

Lock



Press the 'Up & Down' Arrows until the display shows "LOC". Press 'Enter' to confirm this action. Betapack 4 will revert to the Default mode. Pressing the 'Mode' button now will only cycle between Manual Control and Default Mode.

If Super User is entered when Betapack 4 is locked, only the unlock function will be available. The display will show "UNL". To unlock Betapack 4, press and hold the 'Enter' button for 5 seconds. Betapack 4 will unlock and exit super user returning to the Default mode.