

Topset



Topset can be selected on a per channel or all channel basis. On Betapack 4, Topset is applied as a limiting (not scaling) value.

Select 'Topset' by cycling through the modes using the 'Mode' button.

Select required channel or 'A' for all channels, using the 'Up & Down' Arrows and press 'Enter', to confirm.

Now select the topset level you require, again using the 'Up & Down' Arrows and press 'Enter' to confirm and return to the channel selection.

Note that if the law is set to 'Switch', the setting in Topset will instead be used to determine the switch-point. The 'Topset' LED will flash in this case, to indicate the setting being made.