

Clear Memories



Standard Mode

This option allows you to clear all the 12 memories in the dimmer.

Select the *Clear Memories* option from the Memories menu, and press the **ENT** key. The screen shows:

Press ENT key to
clear memories

Press the **ENT** key to clear all the memories and any programmed sequences in the dimmer.

The screen returns to the *Memories* screen.

ChilliNet Mode

This option allows you to clear all the 12 memories for a specified area in the dimmer.

Select the *Clear Memories* option from the Memories menu, and press the **ENT** key. The screen shows:

Area: 1
ENT to clear

The cursor appears in the Area field. Use the numeric or cursor keys to select the required area number (0-10), then press the **ENT** key.

Area 0: This is a special case. The dimmer will clear all stored memories for all areas, and all programmed sequences on the dimmer.

Area 1 -10: The dimmer will clear all the stored memories for the selected area, and any programmed sequences for the selected area on the dimmer.

The screen returns to the *Memories* screen.