

Select the *Preheat* option from the top level menu options, and press the **ENT** key to enter the Preheat menu. The following two options are available:

- [Set Preheat](#)
- [Clear Preheats](#)

Set Preheat

This option allows you to set up a preheat level (between 0 - 20%) for **each** of the dimmer channels.

Select the *Set Preheat* option from the menu, and press the **ENT** key. The screen shows:

```
Channel: xx
Level: xx
```

The cursor is shown in the *Channel* field. Press the **ENT** key to move between the *Channel* and *Level* fields, and adjust the values using the numeric keypad or cursor keys.

Clear Preheats

This option allows you to clear the preheat levels for **all** of the dimmer channels to 0%.

Select the *Clear Preheats* option from the menu, and press the **ENT** key. The screen shows:

```
Push ENT key to
Clear Preheats
```

Press the **ENT** key to set all the channel preheat levels to 0%.