

# Set Start Address




This option allows you to set a DMX start address for the dimmer.

The range for the DMX start address for the Spice dimmer is 1 - 501.

The dimmer channels are then patched automatically as a contiguous block starting at the specified address.

Select the *Set Start Address* option from the menu, and press the **ENT** key. The screen shows:

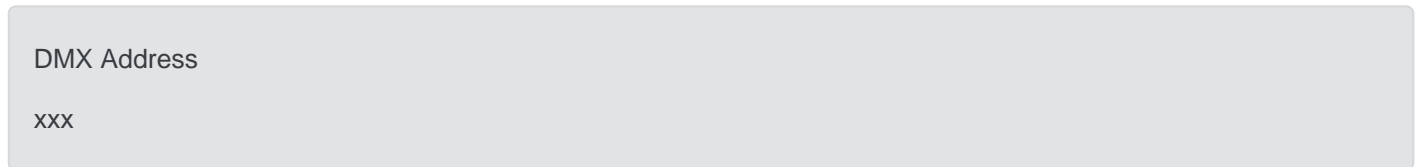

Enter the DMX address using the numeric keypad or cursor keys, then press the **ENT** key.

This sets the start address for the dimmer. The screen pauses briefly and then returns to the *DMX Controls* screen.

Pressing **ESC** on this screen leaves the current DMX address unchanged and return to the *DMX Controls* screen.