

Cue 0



Every programmed playback will have a blank cue 0. Going into cue 0, means the playback is still triggered, however is not controlling any fixtures. You can either jump to Cue 0, by holding down the playback's Go button and typing 0, or by using the arrow keys to move up from Cue 1, which will display Cue 0 (--).