 


FLX Access Instructions




The diagrams below detail the screws that need to be removed to open FLX consoles for access.

- No user serviceable parts inside
- FLX consoles should only be opened by a suitably qualified person
- Opening FLX consoles within 3 years of manufacture will void warranty
- Disconnect mains prior to opening



Remove the lowest single screw from either side (circled). The sides do not need to be completely removed to gain access.

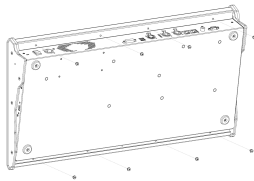

The 4 screws running along the bottom and 4 screws running along the top of the underside of the console need to be removed. To remove flip console upside down onto a soft surface.

Ribbon cables link the front panel and base. Carefully open the console, to avoid damaging cables and connectors.