 
 



Area	Desc.
Tip	Left Channel
Ring	Right Channel
Sleeve	0V Signal Ground



Pin	Desc.
1	Signal Ground (0V)
2	DMX Drive Complement (L-)
3	DMX Drive Trail (L+)
4	Not Connected
5	Not Connected



Pin	In	Output/Thru
1	Not Used	Not Used
2	Not Used	Signal Ground
3	Not Used	Not Used
4	Optic Isolated Input	Output
5	Optic Isolated Input	Output

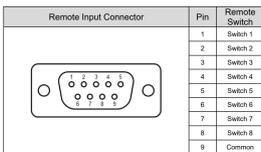

Pin	Remote Switch
1	Switch 1
2	Switch 2
3	Switch 3
4	Switch 4
5	Switch 5
6	Switch 6
7	Switch 7
8	Switch 8
9	Common

