

# The Clear Button



## THE **CLEAR** BUTTON

Upon adjusting the intensity of fixtures, or adjusting any parameters of a fixture, the **Clear** button will illuminate.

This tells you that there are manual fixture adjustments present, and therefore if you were to play back cues, they may look different to how they were programmed, as they will be mixing with manual changes. Manual fixture adjustments are sometimes referred to as "programmer values" or "values in the programmer".

The Clear button can be used for two functions; to clear the current selection, and to clear the manual fixture adjustments.

To clear the selection, you can tap the **Clear** button once. A second tap of **Clear**, will clear all manual control of your lights, reverting them to either their defaults, or to the control of any cues that may be running. To flip these steps around, you can hold **Shift** and tap **Clear**. This therefore leaves the fixtures selected, but clears all manual values.

[Manual intensity values are indicated in red in the Output Window. Double tapping the Clear button will therefore remove these values.](#)