

# View Button



On FLX S24 (and FLX S48 and FLX when the external monitor is disabled), the **View** button can be used to control your internal touchscreen. Pressing **View** will toggle you between the Cues and Faders windows. Holding **Shift** and pressing **View** will take you back to the Output window.

On ZerOS Server, and FLX S48 and FLX when the external monitor is enabled, the **View** button can be used to cycle you through your 4 available external desktops, displayed on the external monitor. Holding **Shift** and pressing **View** will cycle back through your external desktops.